

SILL & HEADER GAUGE

wurtec
www.wurtec.com

INSTRUCTIONS


Wurtec's **Sill and Header Gauge (#11-285)** is used to quickly and accurately set the running clearance for the landing sill and header. Follow these steps:

1. Install all hoistway headers in place and adjust to leave maximum running clearance.
2. Set each end of the header to 1-3/8" from the car sill using the sill and header gauge.
3. Run the car down to the landing sill.
4. Set each end of the landing sill to 1-1/4" from the car sill using the sill and header gauge.
5. Follow the same procedure for each level.


NOTE: The header at the top of the hoistway will have to be set using a level, plumb bob, or laser since the car sill will not reach that level of the hoistway.

NOTE: The sill cannot be adjusted unless the header bolts are tight, and the header cannot be adjusted unless the sill bolts are tight.

Sill to Header

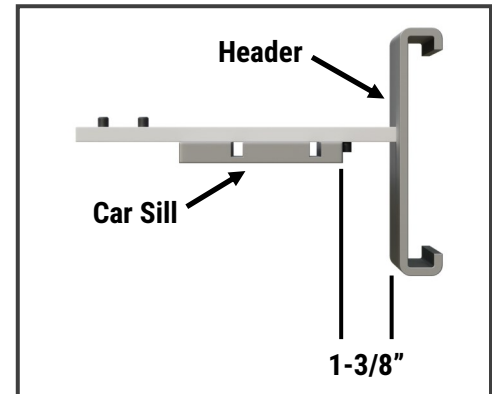


Sill to Sill

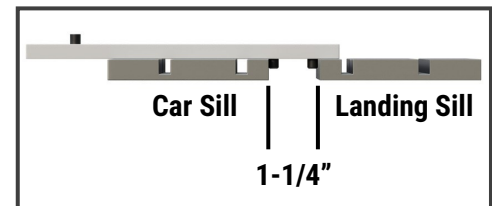

11-285
Sill &
Header
Gauge



In Context - Sill to Header

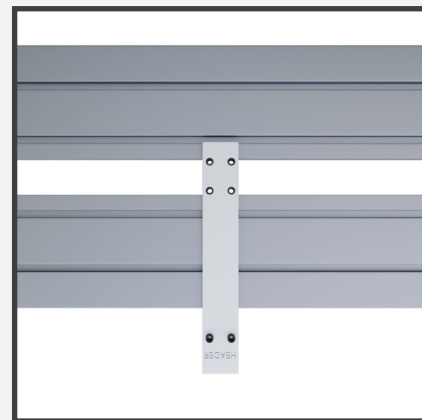

In Context - Sill to Sill