


COUNTERWEIGHT STACKING PINS

Part No. 11-440

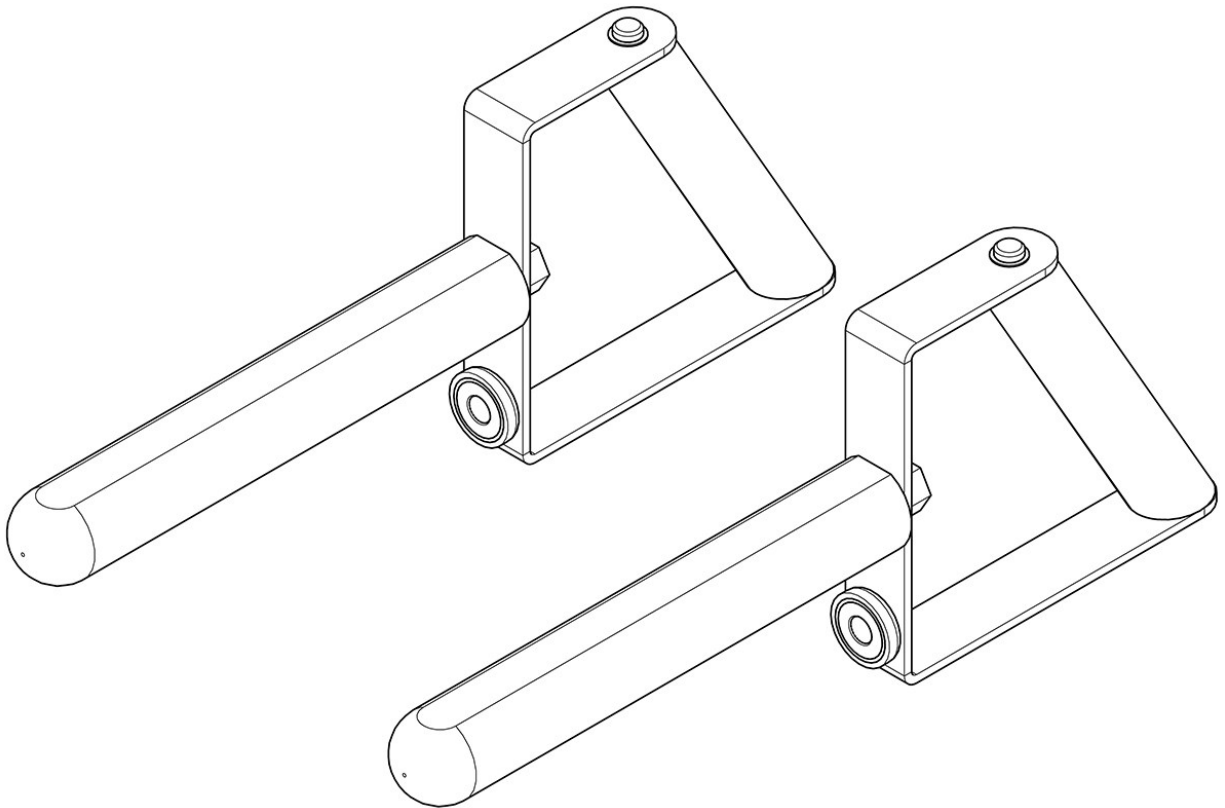

Revision: 00 | 11/2022 | Document No.: Instructions_11-440

TABLE OF CONTENTS

General Warnings..... 3

Packing List..... 4

Equipment Description & Intended Use..... 4

Installation Instructions..... 5

Bill of Materials..... 6

NOTICE

GENERAL WARNINGS

The equipment covered in this manual should only be installed, used, and serviced by qualified personnel trained in proper work and safety procedures. This manual is intended to assist such trained individuals in the installation and use of this equipment and is not intended as a substitute for proper training and experience.


This document or any other information regarding this equipment is not intended to cover all of the possible situations which may be encountered while using the equipment described herein. Should specific situations arise which are not covered by the information provided, or should the user desire further details, the specifics should be directed to Wurtec, Inc.

Note: In the effort of continuous product improvement, Wurtec, Inc. reserves the right to modify the design and specifications of this product at any time without notice.

CAUTION

Failure to comply with the following guidelines can result in minor or moderate injury:

- Keep fingers clear of counterweights when removing the stacking pins. Failure to do so, could result in injury or loss of fingers.
- Always use the counterweight stacking pins in pairs.

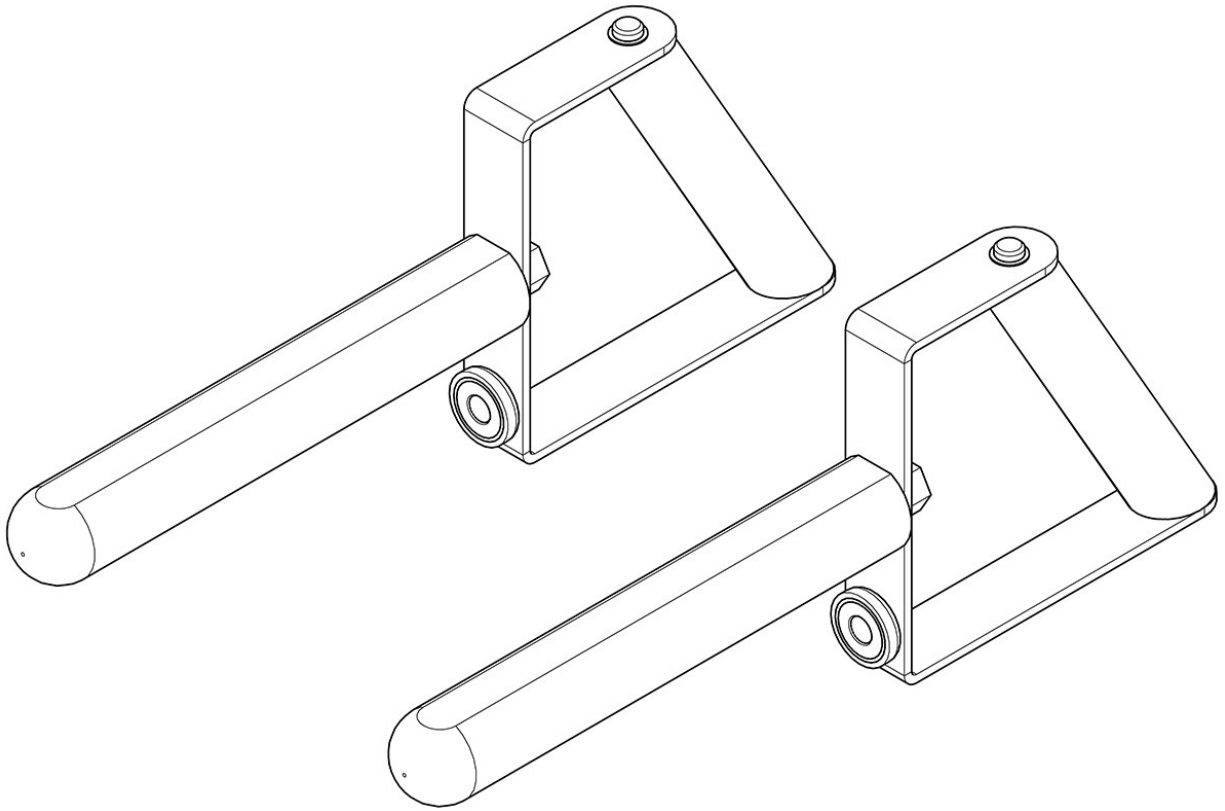PACKING LIST

(2) Counterweight Stacking Pins


EQUIPMENT DESCRIPTION & INTENDED USE

Wurtec's Counterweight Stacking Pins provide an easy method for installing counterweights, while keeping installer's hands safe.

When used in pairs, the counterweights rest on the machined flats of the counterweight pins during installation. After a weight has been installed, the pins can be pulled free from the stack.

Revision: 00 | 11/2022 | Document No.: Instructions_11-440


INSTALLATION INSTRUCTIONS

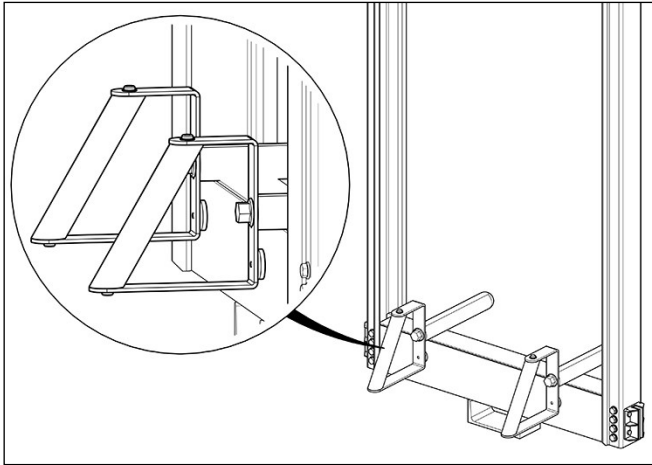

Step 1: Placing the Pins

Step 1: Placing the Pins


- Place each of the Counterweight Stacking Pins securely against the counterweight frame.
- Ensure the magnets on the pins are seated firmly against the metal.

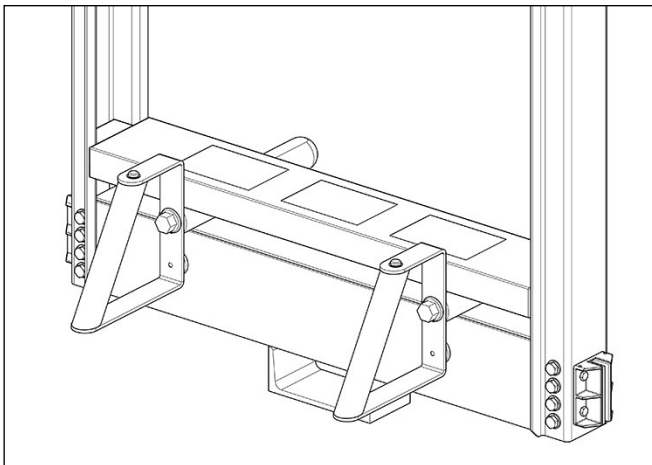

Step 2: Installing the Weights

Step 2: Installing the Weights

- Once the pins are in place, install one counterweight into the frame.

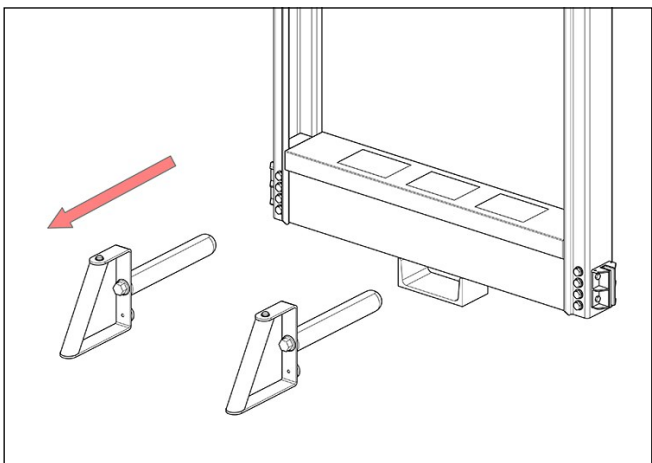


Step 3: Removing the Pins

Step 3: Removing the Pins

- To remove, ensure the area behind arms/ elbows are clear to avoid contact/striking, then pull hard on each of the pins.
- Repeat the above steps until all counterweights have been installed.

Revision: 00 | 11/2022 | Document No.: Instructions_11-440

BILL OF MATERIALS

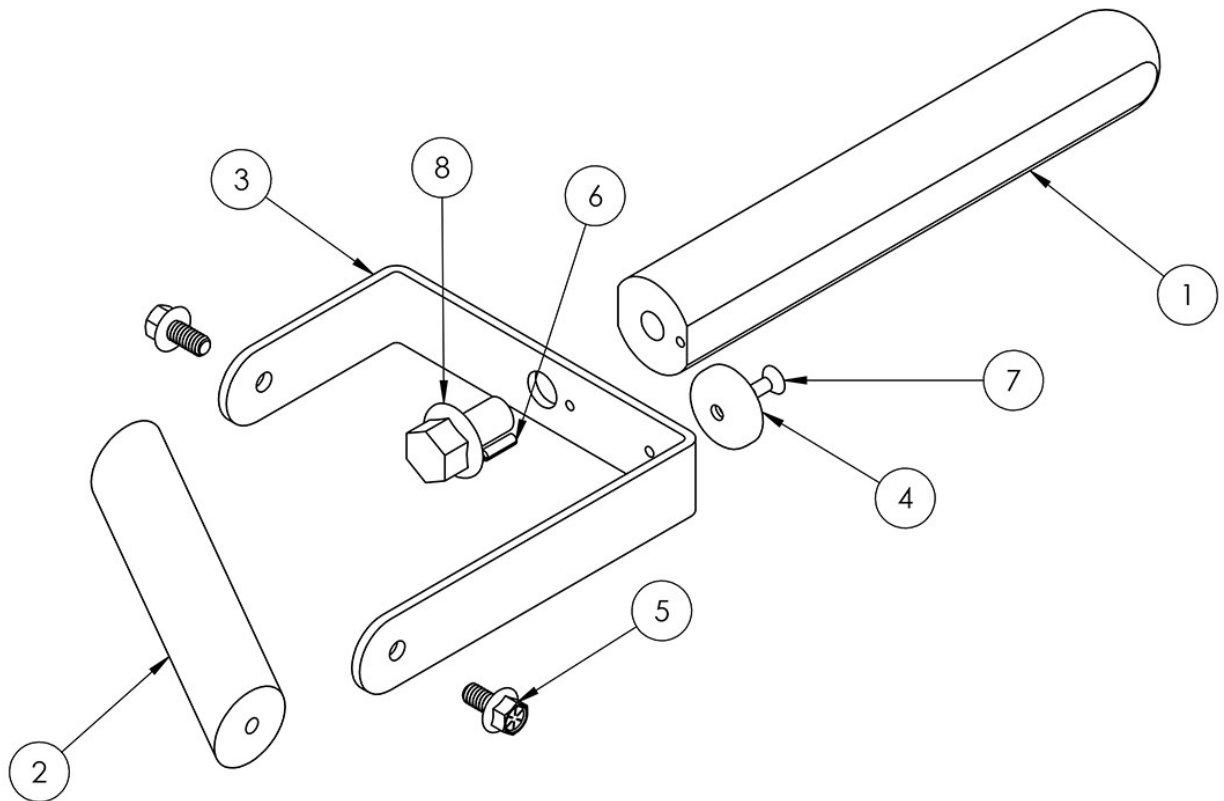

90-10066105 - Single Replacement Counterweight Stacking Pin

Item	Qty	Part No.	Description	Size	Length
1	1	20-10065431	COUNTERWEIGHT STACKING PIN	-	-
2	1	90-10065873	COUNTERWEIGHT HANDLE	-	-
3	1	90-10065867	COUNTERWEIGHT ROD HANDLE	-	-
4	1	5679K16	ENCASED NEODYMIUM MAGNET	-	-
5	2	90409A111	HIGH STRENGTH GRADE 8 STEEL HEX HEAD SCREW	1/4-20	1/2"
6	1	0165849	SLOTTED SPRING PIN	1/8"	1/2"
7	1	90429A128	FLAT SOCKET CAP SCREW	8-32	3/8"
8	1	10065023-25	SERRATED HEX FLANGE SCREW	7/16-14	3/4"

Revision: 00 | 11/2022 | Document No.: Instructions_11-440