


# DEEP PIT LANDING BARRICADE

**Part No. 15-307**

---

## INSTALLATION INSTRUCTIONS

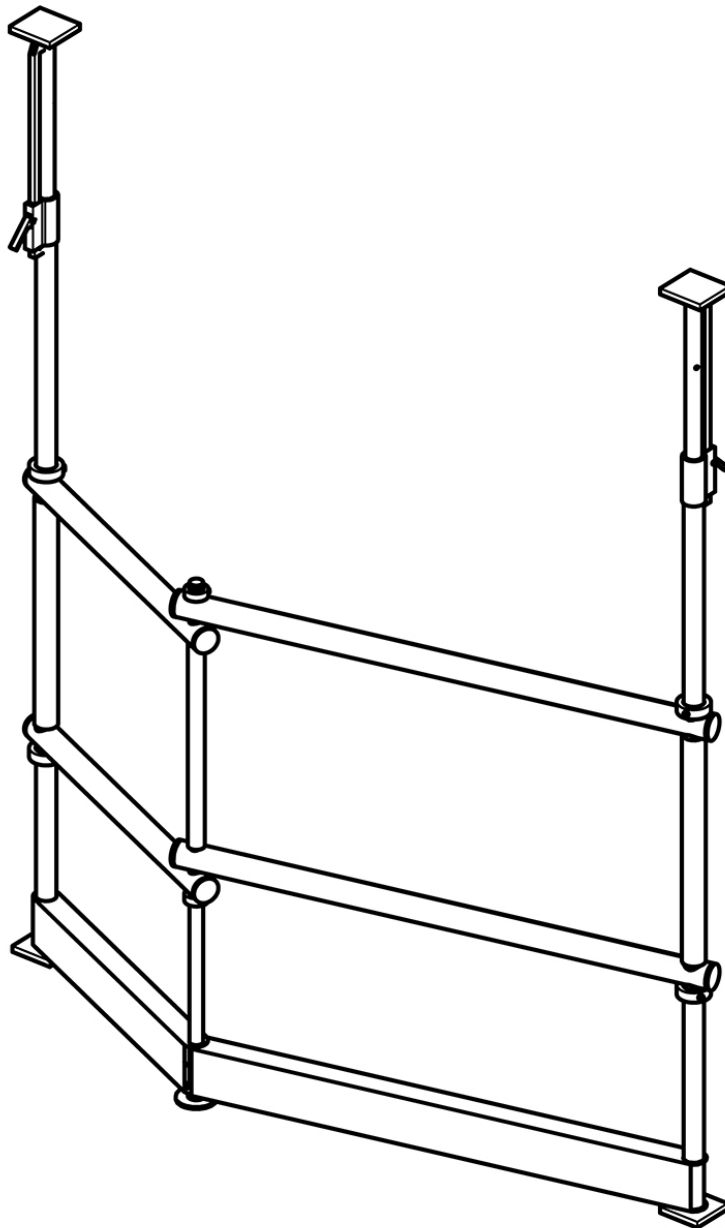

# TABLE OF CONTENTS

|                                             |   |
|---------------------------------------------|---|
| Table Of Contents.....                      | 2 |
| Product Information & Safety Warnings ..... | 2 |
| Required Tools .....                        | 2 |
| Installation Steps .....                    | 3 |
| Bill Of Materials.....                      | 4 |

## PRODUCT INFORMATION & SAFETY WARNINGS

### PRODUCT WARRANTY & INFORMATION



Scan the QR code to view detailed warranty information at [wurtec.com](http://wurtec.com). For questions or product support, contact Wurtec Customer Service at 1-800-837-1066. If a Declaration of Conformity is available for this product, it can be downloaded from its product page on [wurtec.com](http://wurtec.com).

### EQUIPMENT DESCRIPTION & INTENDED USE

The Deep Pit Landing Barricade is a reliable safety solution designed to secure landing entryways and prevent accidental falls into the hoistway. Constructed from durable high-strength aluminum, this lightweight yet robust barricade ensures long-lasting performance in demanding environments. With its adjustable design, it extends to accommodate entryways up to 64" wide and is easily secured using (2) ratchet lock cargo bars. Keep your worksite safe and compliant with this essential protection tool.

## WARNING

### EXCLUSION OF LIABILITY

This equipment should only be installed and serviced by trained personnel. This manual is a guide, not a substitute for formal training, and may not cover every scenario or condition of use. Wurtec reserves the right to change product design and specifications without notice.

### FAILURE TO COMPLY WITH THE FOLLOWING GUIDELINES CAN RESULT IN DEATH OR SERIOUS INJURY


- Ensure the barricade is positioned flush against the door jamb.
- The barricade is designed for use in doorways up to 64" wide. Extending it beyond this limit may compromise its structural integrity and lead to failure.
- Ensure all set screws are tightened.
- Ensure vertical posts are fully extended and locked into place.

## REQUIRED TOOLS

The following are the minimum required tools for installation:


- Allen Wrenches

# INSTALLATION STEPS

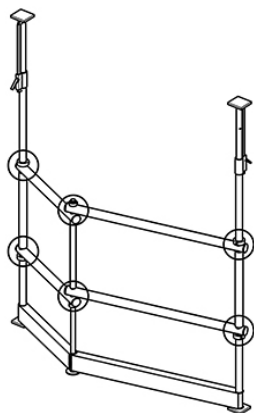


## Step 1: Loosen the Set Screws

- Using an allen wrench, loosen the set screws on all six of the shaft collars.

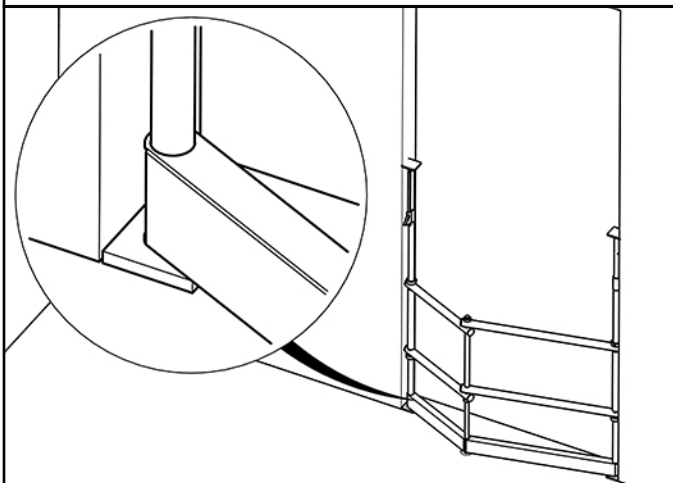


## Step 2: Position the Barricade

- Position the Barricade within the entryway so the bottom floor mounts are flush against the door jamb.
- \*NOTE: The barricade can extend up to 64" in width.

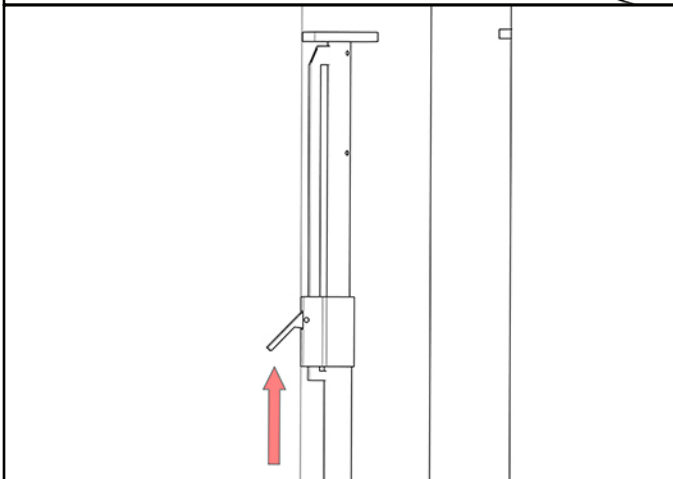

## Step 3: Lock the Posts



- Release the levers on the two vertical posts and extend them to the top of the door jamb.
- Once the posts are positioned, tighten the levers to lock the posts in place.

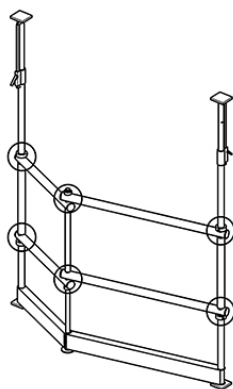

## Step 4: Tighten the Set Screws

- Tighten the set screws on all six shaft collars.

# BILL OF MATERIALS

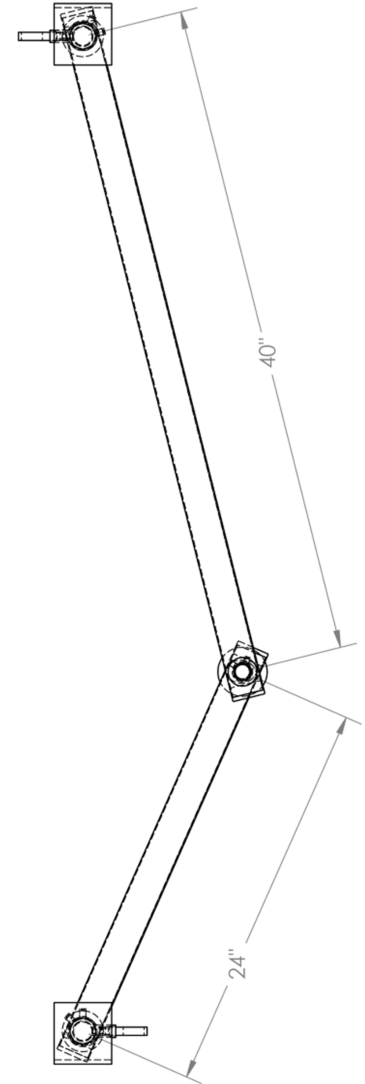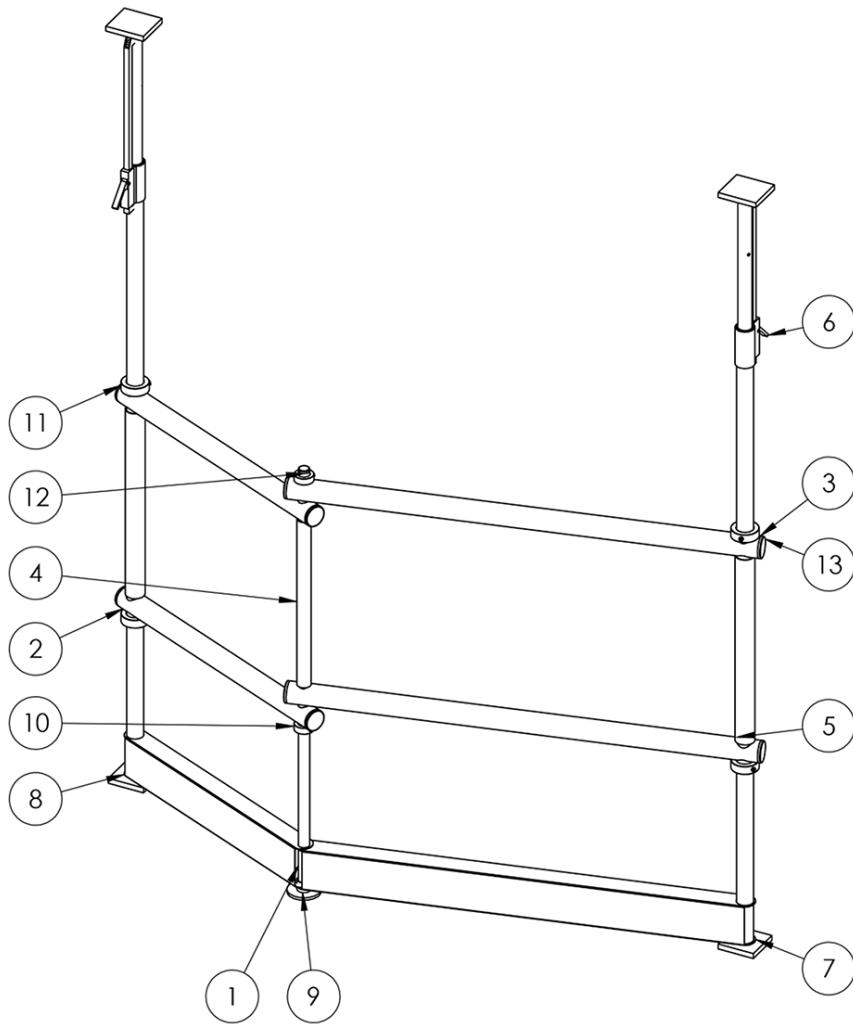

| ITEM NO. | QTY. | PartNo      | DESCRIPTION                                                       |
|----------|------|-------------|-------------------------------------------------------------------|
| 1        | 1    | 15-307-01   | POST                                                              |
| 2        | 2    | 15-307-02   | SHORT RAILING                                                     |
| 3        | 2    | 15-307-03   | LONG RAILING                                                      |
| 4        | 1    | 15-307-04   | SPACER 1.250D X 17"LG .065W                                       |
| 5        | 2    | 15-307-05   | SPACER 1.750D X 19"LG .065W                                       |
| 6        | 2    | 15-307-08   | LB200 CARGO BAR (US CARGO CONTROL OR EQUIV.) - PURCHASE & RE-WORK |
| 7        | 1    | 15-307-11   | LONG KICK PLATE                                                   |
| 8        | 1    | 15-307-12   | SHORT KICK PLATE                                                  |
| 9        | 1    | 15-307-13   | KICKPLATE SPACER 1.250D 1"LG .065W                                |
| 10       | 2    | 9414T210    | MCMaster CARR #9414T210 1 1/16" SHAFT COLLAR (OR EQUIV.)          |
| 11       | 4    | 9414T290    | MCMaster CARR #9414T290 1 9/16" SHAFT COLLAR (OR EQUIV.)          |
| 12       | 1    | CCF-1-14-20 | CAPPLUGS 1" TUBE PLUG (OR EQUIV.)                                 |
| 13       | 8    | CCF-2-14-20 | CAPPLUGS 2" TUBE PLUG (OR EQUIV.)                                 |