
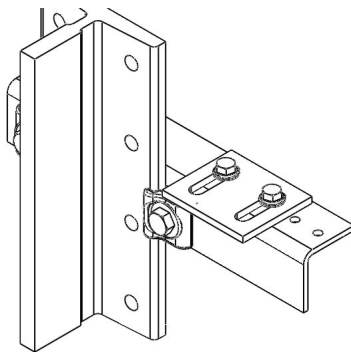


Adjustable Plumb Line Clamp

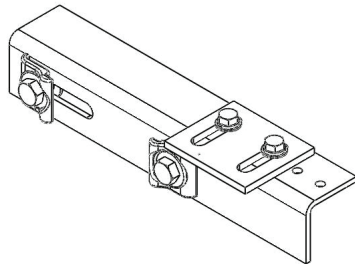

Part No. 10-180

INSTRUCTIONS

The Wurtec 10-180 Adjustable Plumb Line Clamp works ideally with the Realignment Pointer Set (10-110.) This tool allows you to drop your plumb line to the sides and behind the nose of the rail and therefore clear of the car.

STEPS

1. Install the 10-180 Adjustable Plumb Line Clamp to the back of the rail by tightening the rail clips to the rail.
2. Set the 10-180 Adjustable Plumb Line Clamp to a setting in which the plumb line is clear of the car. It is normally easiest if you start at the top of the hoistway.
3. Feed the plumb line through the Adjustable Plumb Line Clamp after it is set, ensure that there is no interference with any other equipment. Install a second bracket at the bottom of the hoistway, set it relative to the top bracket and use it to trap your line. Add weight to the line and verify it is accurately set.
4. If using the #10-110 ensure the line(s) are within the limits of the pointer.