
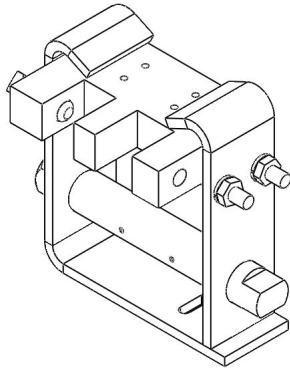


Plumb Line Tensioner

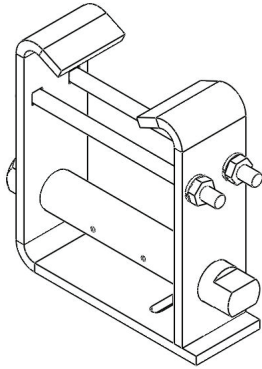

Part No. 10-190

INSTRUCTIONS

The Wurtec 10-190 Plumb Line Tensioner is an invaluable tool when tightening a Plumb Line is the task at hand. The #10-190 easily attaches to any of the Wurtec Plumb Line Clamps (#10-150 through 10-170). Once attached the 10-190 can tension the line or re-tension a line in seconds..

STEPS:

1. Using a 7/16 wrench, release the tension in both of the nuts at the top of the 10-190. By relieving the tension the #10-190 can easily slide onto a Plumb Line Clamp.
2. Slide the 10-190 onto a Plumb Line Clamp as shown in the diagram below. Ensure the Plumb Line falls between the two(2) carriage bolts which the 7/16 nuts are connected too. Tighten the 7/16 nuts to create a tight fit between the #10-190 and the Plumb Line Clamp being used.
3. Attach the end of the Plumb Line to the Shaft. Tighten the Plumb Line to the desired tension and lock the tensioning shaft in place using the nut provided