


Hoist Bar

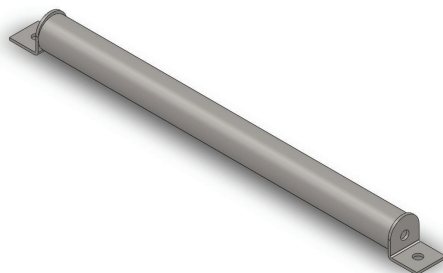

Instructions

Attach your sling or choker over the hoist bar and push the sling or choker down through the opening.

Steps:

1. Place the hoist bar over the blockout in a concrete floor as close to the center of the opening as possible. Make sure that the floor is capable of supporting the intended load and that you do not span too large an opening with the hoist bar (see label on bar).
2. Use provided clips to anchor the Hoist Bar to the floor.

SPAN (IN)	3	4	6	8	9	12
5 FOS	6000	4500	3000	2250	2000	1500
3 FOS	10000	7500	5000	3750	3250	2500
1.5 FOS	20000	15000	10000	7500	6500	5000

*FOS = Factor of Safety with Respect to Yield Stress

