



Escalator Barrier


The Wurtec escalator construction barrier is easily installed to almost any application and provides a fall protection barrier for the installers by creating a wire rope handrail system on both sides of the escalator.

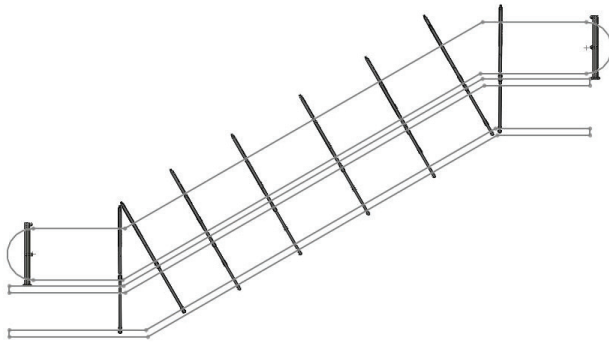

1. Install the four (4) mounting posts two (2) at the top and two (2) bottom of the escalator. Ensure the eye bolt on each mounting post faces towards the corresponding mounting post to ensure the wire rope can be installed correctly.
2. Attach a tension device to each of the eye bolts on the two (2) lower mounting posts, totaling four (4) devices to be attached.
3. Install the vertical stanchions as evenly spaced as possible along each side of the escalator with the holes facing the center of the escalator. Ensure the stanchions are properly secured and tight.
4. Pass wire ropes through the holes of each stanchion at the desired heights. One high rope and one low rope on each side totaling four (4) wire ropes. Attach each wire rope to the corresponding eye bolt or tensioner.
5. Tension devices should be used to tension the wire ropes enough to allow the newly erected barrier to support the required loads.

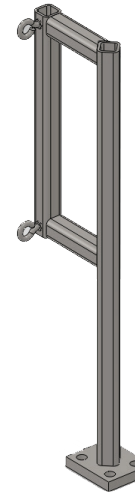

Step 1

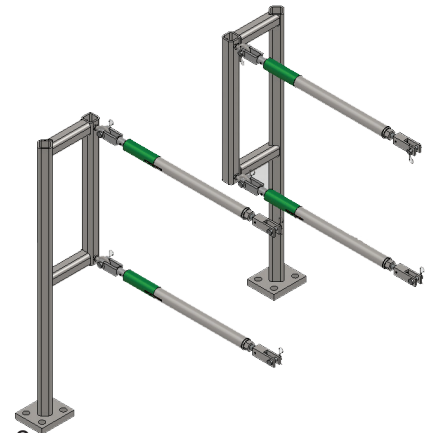

Step 2



Step 3