


CAR BUILDING RAIL BLOCK

Product Description

Car Building Rail Blocks are easy and quick to install. Place on the guide rails, at any working height, tighten the 6 set screws to 70 ft-lb (95 Nm), and assemble the car sling. Use these blocks to rest your car or counter-weight frame at any location in the hoistway. See table below for load ratings. Rail blocks sold singly.



11-185-04

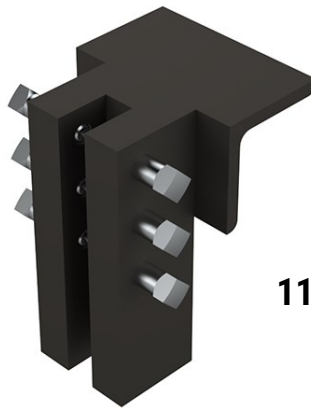

11-187



11-185

Part No.	ISO Code	Rail Blade Width (in · mm)	Weight (lb · kg)	WLL per Pair (lb/kg)	Size of Set Screws (in)
11-185	T89, T127-1, T127-2, & T140-1	5/8 to 3/4 · 16 to 19	22.3 · 10.1	25000 · 11340	5/8
11-185-04	T89, T127-1, T127-2, & T140-1	5/8 to 3/4 · 16 to 19	35.9 · 16.3	15000 · 6804	5/8
11-186	T140-2 & T140-3	1-1/8 to 1-1/4 · 29 - 32	23.5 · 10.6	25000 · 11340	5/8
11-187	T89, T127, T127-2 & T140-1	5/8 to 3/4 · 16 to 19	16.8 · 7.6	25000 · 11340	5/8



All Wurtec Rail Blocks models are CE and UKCA certified.

Revision: 04 | 10/2022 | Document No.: Specifications_11-185