


SLANT TOP FIXED CANOPY

1. On each corner of the platform, a canopy corner post (1) must be placed and securely fastened with four 1/4" bolts (1b). In total sixteen bolts will be used.
2. Bolt two roof braces (2) together with one 1/4-20 Hex bolt (2b) as shown in detail view A
3. Secure the ends of the two roof braces (2) to the tops of the corner posts with two 1/4-20 Hex bolts creating a peaked roof.
4. On the front of the canopy secure two wood clamps (4) bolting each to the corner posts for a total of four on the front of the canopy. Each wood clamp requires two 1/4-20 carriage bolts for a total of eight.
5. Securely fasten nine high quality 2x4 wood members (5) to the canopy corner posts, three as handrails, three as mid-rails and three as kickplates.
6. Install and securely fasten a plywood roof (6) or equivalent to the diagonal roof braces.
7. To create removable 2x4 wood members (7) for the opening, notch the bottom of a high quality (2x4) by measuring the distance between the wood clamps on the corner posts. The wood member should fit loosely into the wood clamps so that they are removable but also secure enough to lean on.

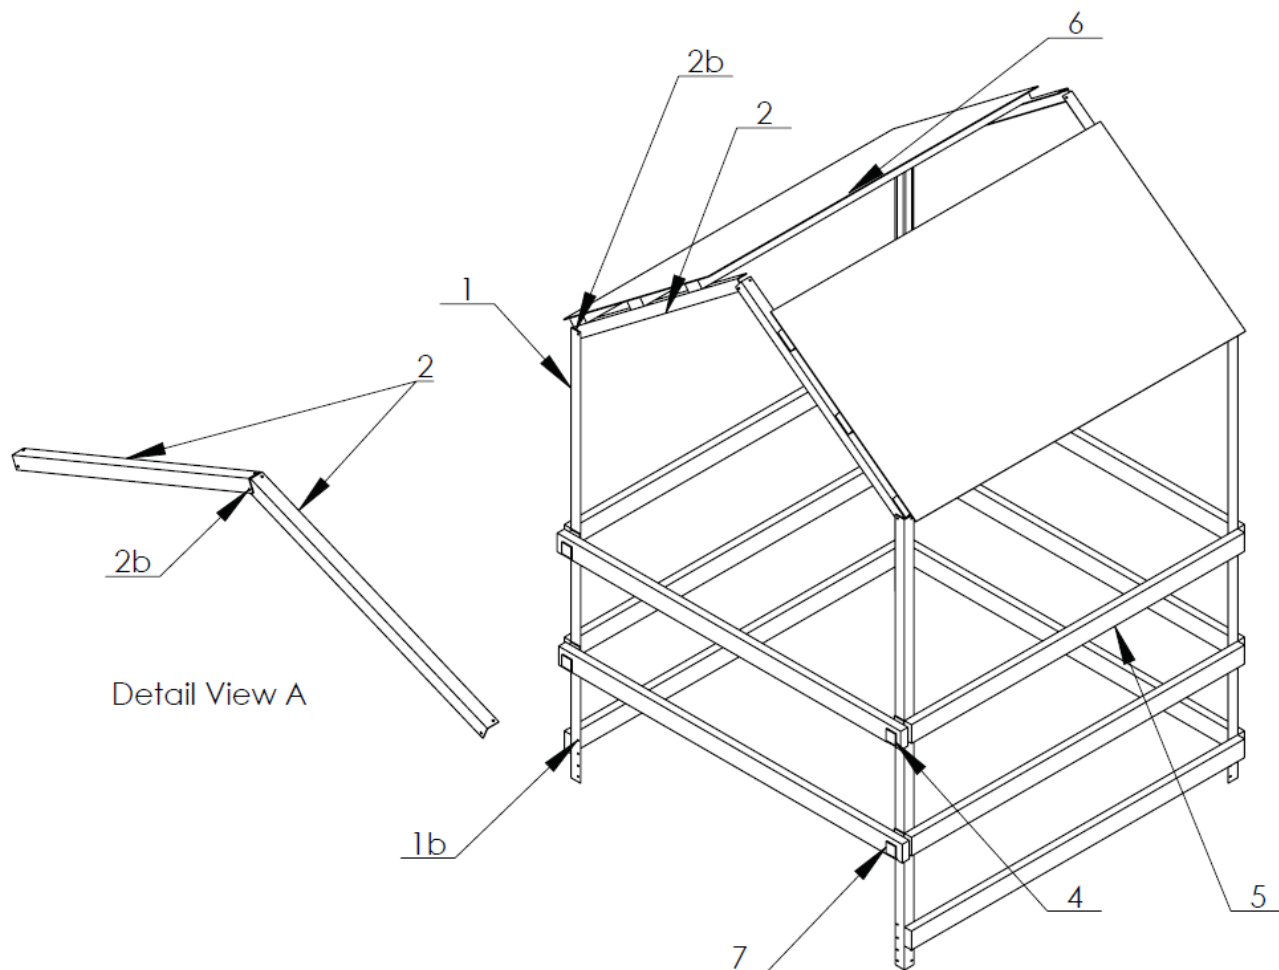

Revision: 01 | 06/21 | Document No.: Instructions_11-355