
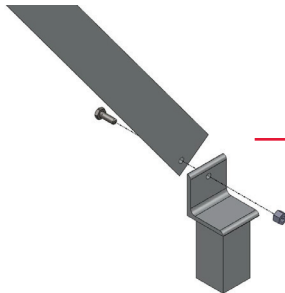
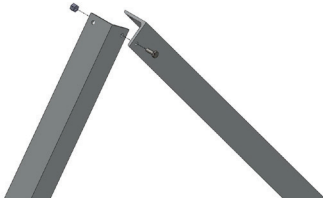


Slant Top Break Away Canopy

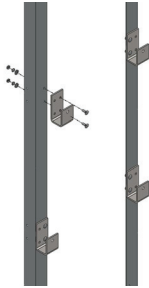

Instructions

The Wurtec Simple Hard Top Breakaway Canopy is designed to make canopy installation to your platform easy and fast. The canopy also provides extra protection, sometimes needed, when working in an open hoist way.

Steps:

1. Attach two (2) U Brackets to two (2) different post member weldments as shown in the picture on the left. The parts needed are as follows:
1/4-20 X .75" Carriage Bolt Z
1/4" Diameter Flat Washer
1/4" Spring Lock Washer Z
1/4-20 Hex Nut Z
2. Attach all of the post members to the base of your platform ensuring that the U Brackets are parallel with each other.
3. Bolt two(2) Roof Supports together as shown in the picture on the left. The parts needed are as follows :
1/4-20 X 3/4" HHCS Z
1/4-20 Nylon Insert Hex Nut Z
4. Bolt the Canopy Attachment to free ends of each of the Roof supports. Ensure that the Canopy Attachments face the correct way as shown on the left. The parts needed are as follows:
1/4-20 X 3/4" HHCS Z
1/4-20 Nylon Insert Hex Nut Z
5. Place the Canopy Attachments on top of the Post Members Weldments.
6. Attach a plywood cover over the Roof Supports and screw in. You now have finished your Wurtec Simple Hard Top Breakaway Canopy.

