



Omega Rail Lifter

Instructions

500 LB Capacity



Part No. 11-297

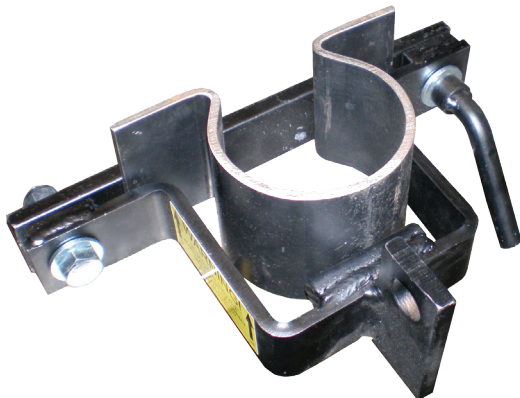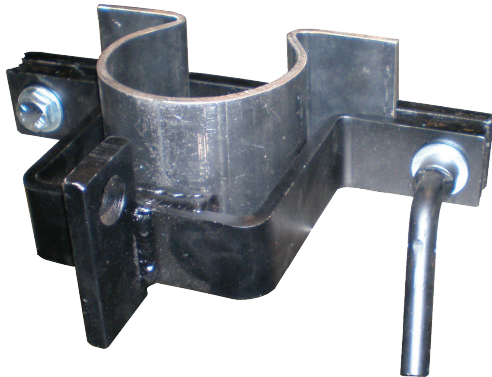

1. Safely attach the lifter to your line or wire rope using any one of the following methods:
 - a. Wurtec #11-200 or #11-250, Quick Release Clevis.
 - b. Directly with a thimble and appropriate grips.
 - c. A screw pin or bolted pin anchor shackle with a 1" or greater throat opening. (Nominal 5/8")
2. Install the splice plate at the top of the omega rail to be stacked.
3. Rotate the release handle to the up position and retract the pin from the faceplate. Rotate the faceplate to open and place the lifter on the omega rail.
4. Rotate the faceplate closed and insert the release pin.
5. Rotate the release pin to down or locked position and verify that the faceplate is locked.
6. Begin to raise the lifter, allowing it to slide up the Ω rail until it engages the splice plate at the top of the Ω rail. Once the lifter engages the splice plate you will be able to pick and stack the omega rail.
7. Hoist the Ω rail to the desired location, lower and securely attach the Ω rail to the previous splice plate.
8. Lower rail lifter for release from the omega rail and reverse installation process.
9. Lower the lifter to the bottom and repeat the lifting process for the next Ω rail.