

PIT LADDER

Part No. 20-103-XX



TABLE OF CONTENTS

General Warnings..... 3

Installation Instructions..... 4

Bill of Materials..... 6

NOTICE

GENERAL WARNINGS

The equipment covered in this manual should only be installed, used, and serviced by qualified personnel trained in proper work and safety procedures. This manual is intended to assist such trained individuals in the installation and use of this equipment and is not intended as a substitute for proper training and experience.

This document or any other information regarding this equipment is not intended to cover all of the possible situations which may be encountered while using the equipment described herein. Should specific situations arise which are not covered by the information provided, or should the user desire further details, the specifics should be directed to Wurtec, Inc.


Note: In the effort of continuous product improvement, Wurtec, Inc. reserves the right to modify the design and specifications of this product at any time without notice.

WARNING

Failure to comply with the following guidelines can result in death or serious injury:


- This ladder complies with ASME A17.1 Code Section 2.2.4.2 for Safe and Convenient Pit Access.
- Entering the Pit while the elevator is operating can result in serious bodily harm or death.
- Climb and descend the ladder in a controlled, deliberate manor.
- Using the ladder in a haphazard manner can result in falls from heights in excess of 4ft. , which can result in serious bodily harm or death.
- Always wear proper safety equipment.
- Fall hazard. Climb ladders carefully. ALWAYS use both hands.

INSTALLATION INSTRUCTIONS

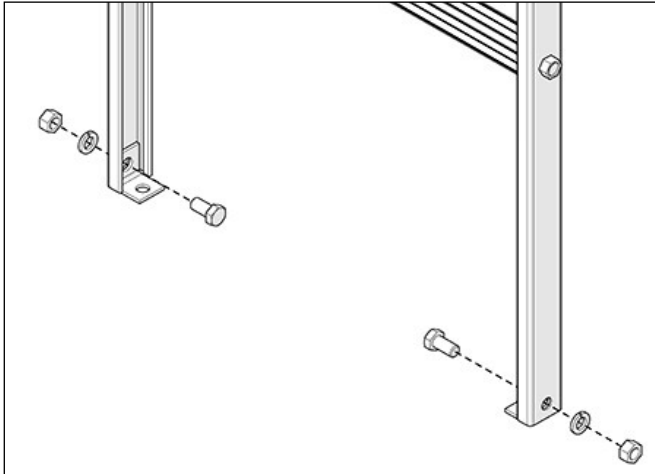


Step 1: Attach Foot Mount Bracket

- *NOTE: Ladder must be mounted vertically and anchored securely to the pit wall and floor.
- Attach foot mount bracket to ladder rail, using 3/8" hardware. The bracket can be mounted inside or outside of the ladder rail.

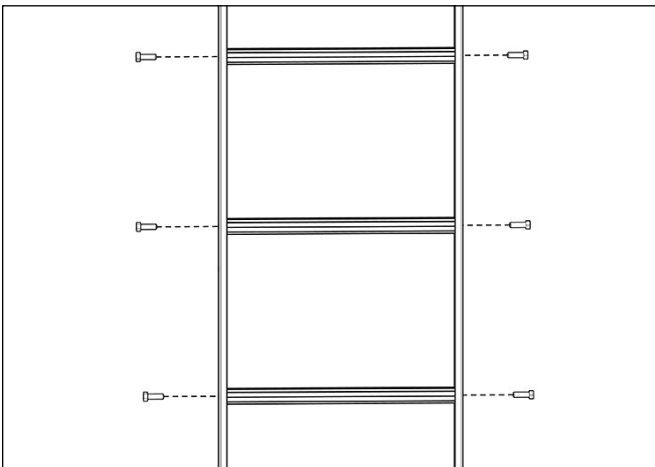

Step 2: Attaching the Ladder Rungs


- Position the ladder rungs on inside of ladder rail, use 3/8" - 16 "F" self tapping screws to fasten rungs to rail.
- Do this to one side of ladder wall mount bracket. NOTE: wall mount brackets must be spaced no more than 5 ft. apart, no more than 1 ft. from the top of the ladder, and must be mounted with the same self-tapping screws as the rung. *NOTE: (DO NOT ADD RUNG TO JOINT STIFFENER LOCATION AT SAME TIME)

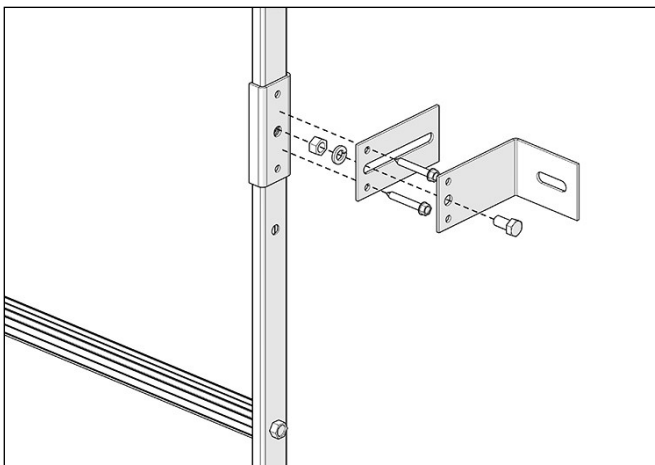

Step 3: Attaching the Joint Stiffener & Ladder Tail

- *NOTE: Flared end of the ladder tail points up.
- Fasten the side rails together by locating the joint stiffener over the outside rails.
- Use 3/8" - 16 type "F" self tapping screws to fasten rung and stiffener to both rails. Use (2) 1/4" - 14 self tapping screws in the small holes of the stiffener for added support.


INSTALLATION INSTRUCTIONS

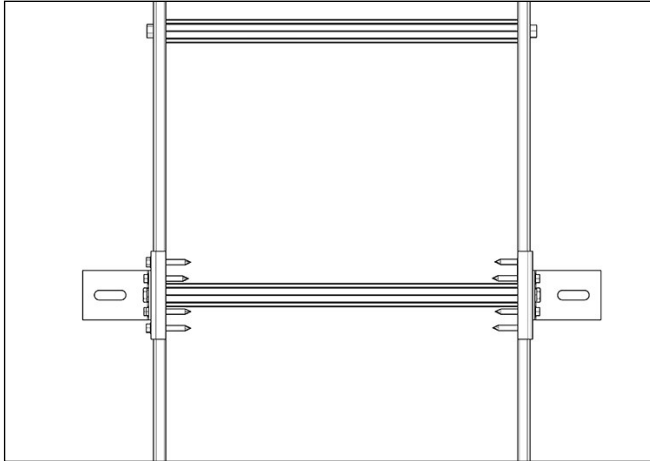

Step 4: Connecting Other Side of Ladder

- Fasten ladder tail to opposite side of ladder rungs using 3/8" - 16 type "F" self tapping screws.
- Repeat steps on the opposite side of the ladder.
- Insert 1/4" - 14 self tapping screws in small holes in mounting bracket and bracket adapter for added support.

BILL OF MATERIALS

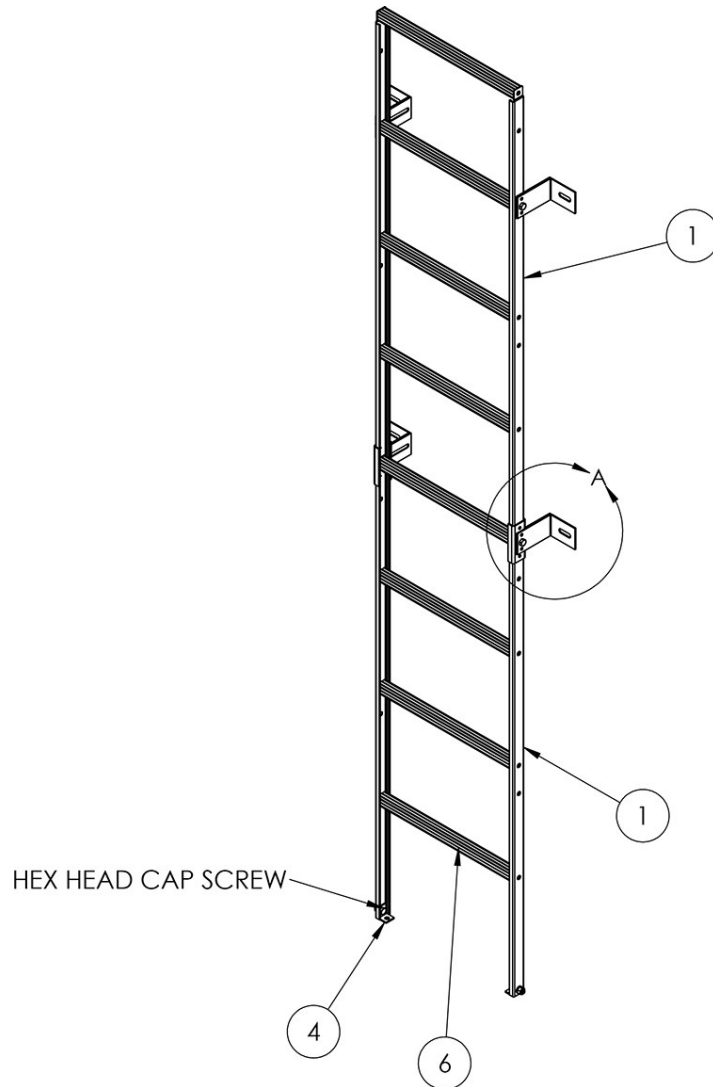

Item No.	Quantity	Part No.	Description
1	VARIES	20-102-01	4FT. RAIL
2	VARIES	20-101-09	MTG. BRACKET
3	VARIES	20-101-10	MTG. BRACKET ADAPTER
4	VARIES	20-101-11	MTG. FOOT
5	VARIES	20-101-12	JOINT STIFFENEER
6	VARIES	20-101-07	PIT LADDER RUNG
7	VARIES	20-103-08-HDW	HARDWARE KIT

Revision: 01 | 04/2023| Document No.: Instructions_20-103-XX