

WUR-COM CAR STATION

Part No. 11-10068646 | 11-10071542 | 11-10071543

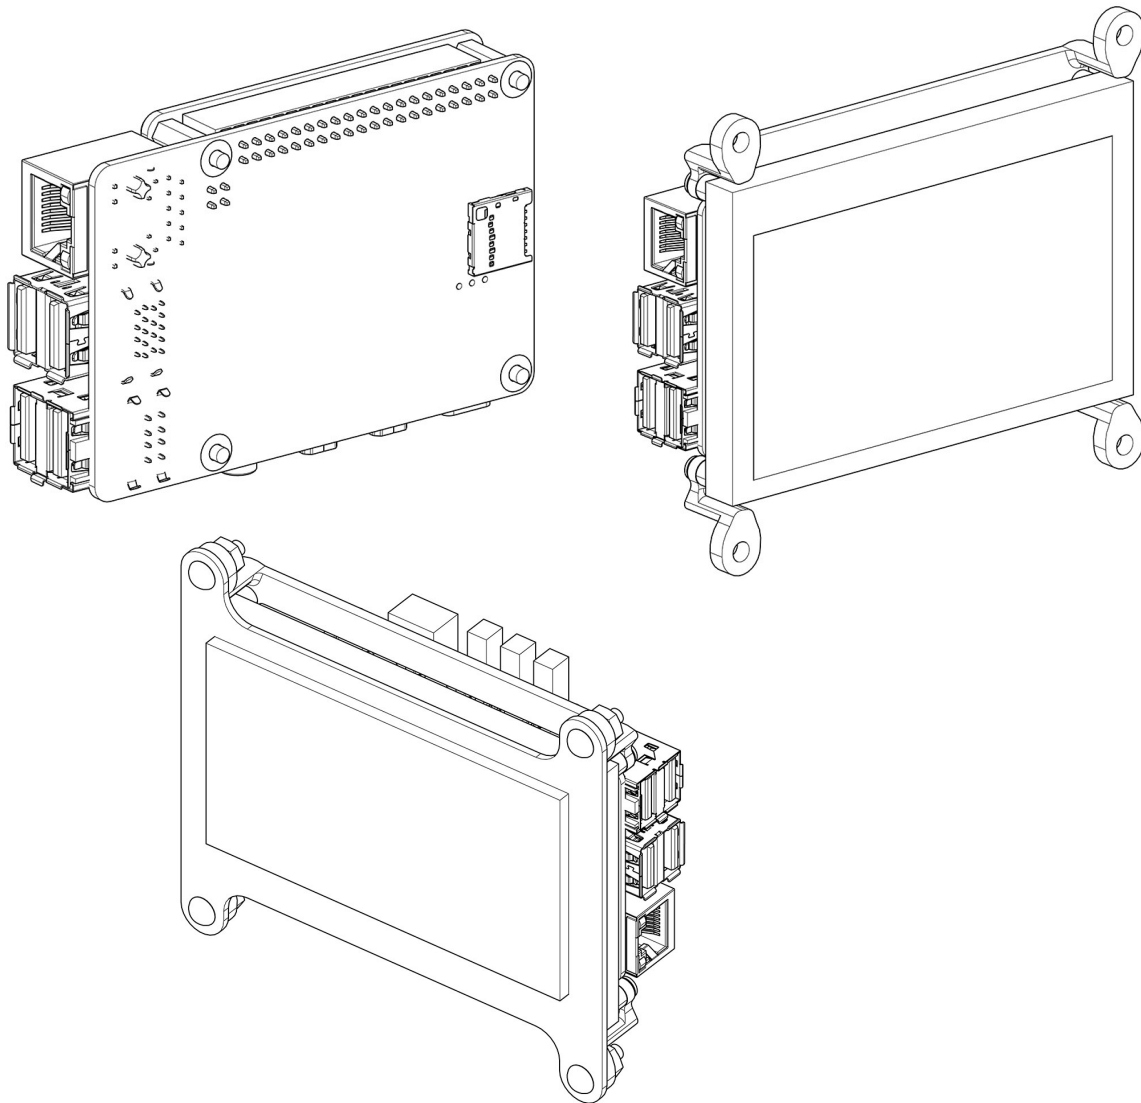


TABLE OF CONTENTS

General Warnings.....	3
Installation Documentation & Video Tutorials.....	4
Equipment Description & Intended Use.....	4
Installation / Assembly Tools Required	5
Packing List - 11-10068646	5
Packing List - 11-10071542	6
Packing List - 11-10071543	6
Cutouts.....	7
Installation Instructions.....	8
Notes.....	11

NOTICE

GENERAL WARNINGS

The equipment covered in this manual should only be installed, used, and serviced by qualified personnel trained in proper work and safety procedures. This manual is intended to assist such trained individuals in the installation and use of this equipment and is not intended as a substitute for proper training and experience.

This document or any other information regarding this equipment is not intended to cover all of the possible situations which may be encountered while using the equipment described herein. Should specific situations arise which are not covered by the information provided, or should the user desire further details, the specifics should be directed to Wurtec, Inc.

Note: In the effort of continuous product improvement, Wurtec, Inc. reserves the right to modify the design and specifications of this product at any time without notice.

INSTALLATION DOCUMENTATION & VIDEO TUTORIALS

All Wur-Com documentation, including; installation instructions, field wiring diagrams, video tutorials, quick start guides, user manuals, etc. can be found on the Wurtec website, here:

<https://wurtec.com/wur-com>

Or, use the camera app on your phone to scan the QR Code below.



EQUIPMENT DESCRIPTION & INTENDED USE

The Wur-Com Emergency Communication system provides essential emergency contact between passengers in the elevator car and the authorized personnel in the building or at a call center. By pressing the help button on the car station, passengers are quickly connected to emergency help using an audio feed or chat feature.

Using the Lobby Station, or any internet connected device, Administrators can login to see which elevator is experiencing issues. The video feed allows them to see directly into the car, discern the nature of the emergency, and contact the appropriate authorities to resolve the issue.

During an emergency the Wur-Com Emergency Communication system allows administrators to remain in constant contact with passengers in the elevator car.


The Wur-Com Emergency Communication system conforms to the ASME A17.1/CSA B44 2019 and IBC 2018 requirements.

INSTALLATION / ASSEMBLY TOOLS REQUIRED


The following tool list is the minimum required for installation. This process can be completed with the following tools:

- Electric drill and bits
- Phillips Head Bit or Standard Phillips Head Screwdriver
- Measuring Tape
- Pencil


PACKING LIST - 11-10068646

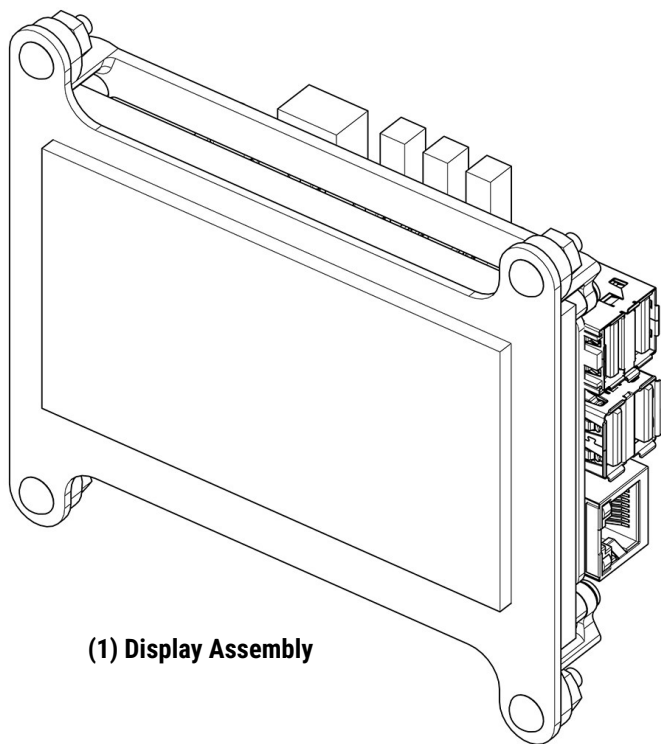


(1) Display Assembly

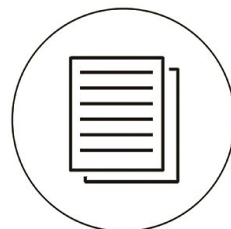

(3) Wur-Com Documentation




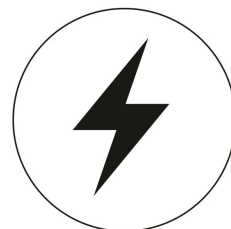


(1) Wiring Kit


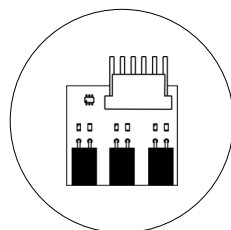


(1) EMI Filter Board

*Wurtec Cellular devices, 10071309 & 10062378, are recommended for optimal signal and video quality

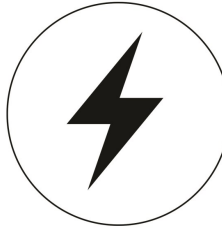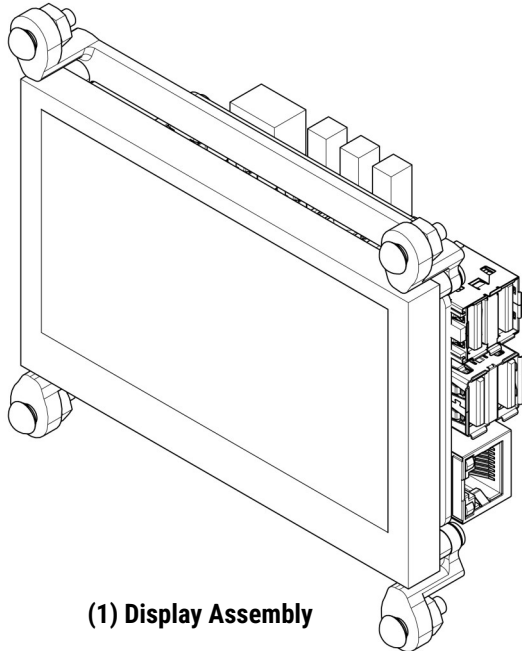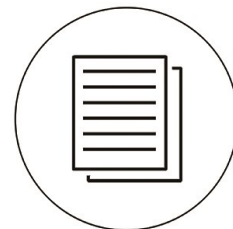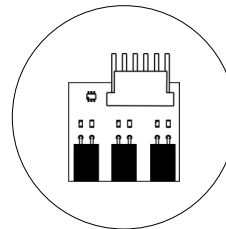
PACKING LIST - 11-10071542**(1) Wiring Kit****(3) Wur-Com Documentation****(1) EMI Filter Board**

*Wurtec Cellular devices, 10071309 & 10062378, are recommended for optimal signal and video quality

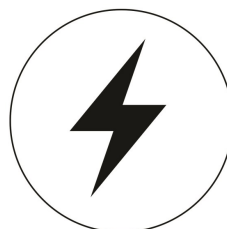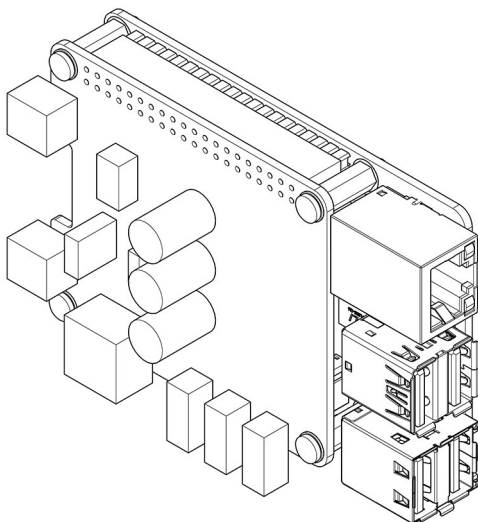
PACKING LIST - 11-10071543**(1) Wiring Kit**

*Wurtec Cellular devices, 10071309 & 10062378, are recommended for optimal signal and video quality

CUTOUTS

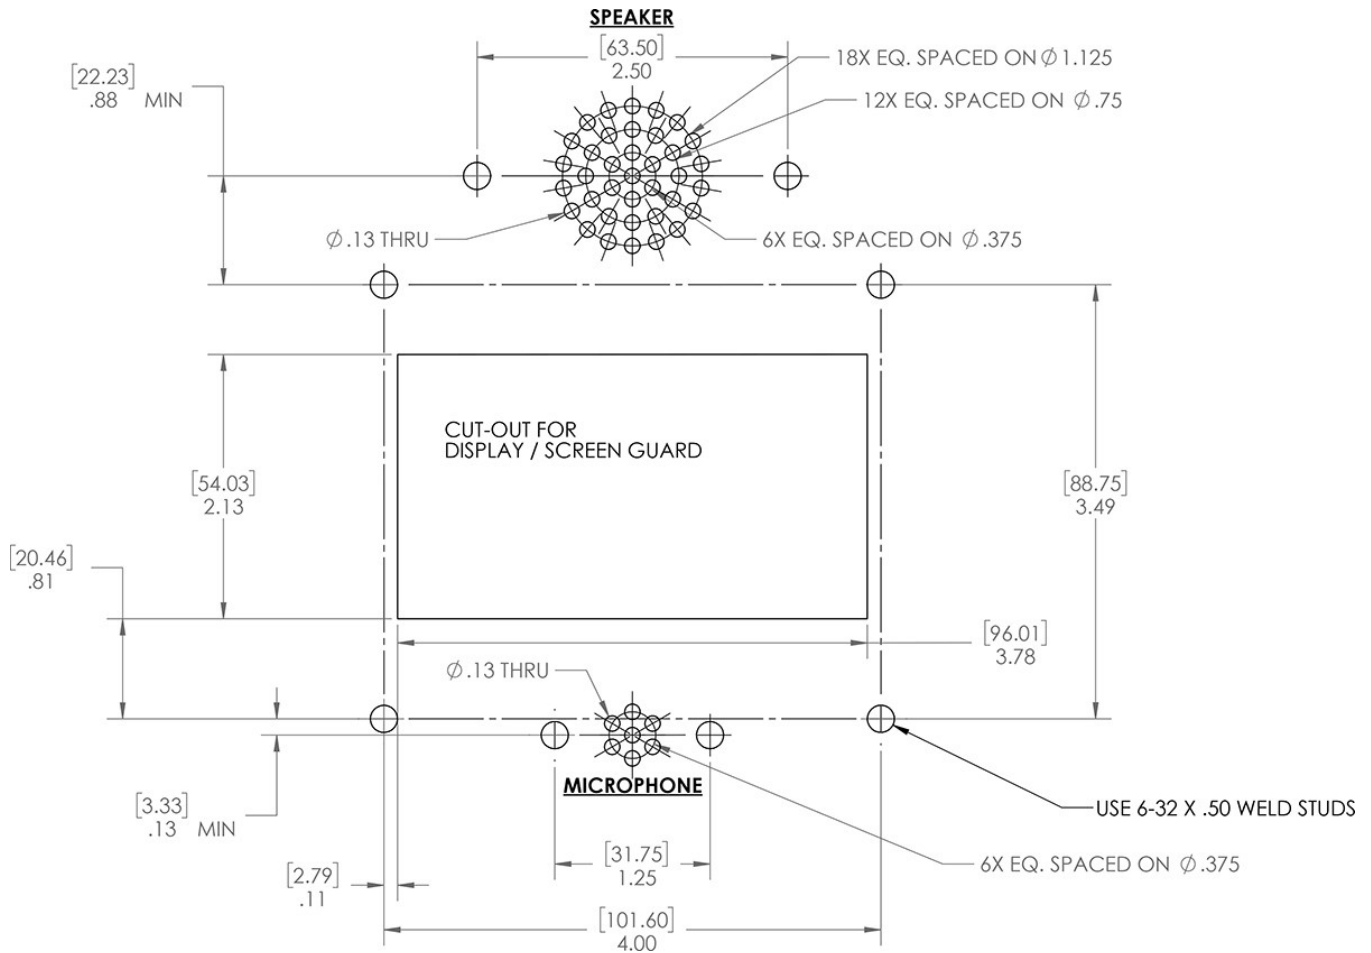

INSTALLATION INSTRUCTIONS

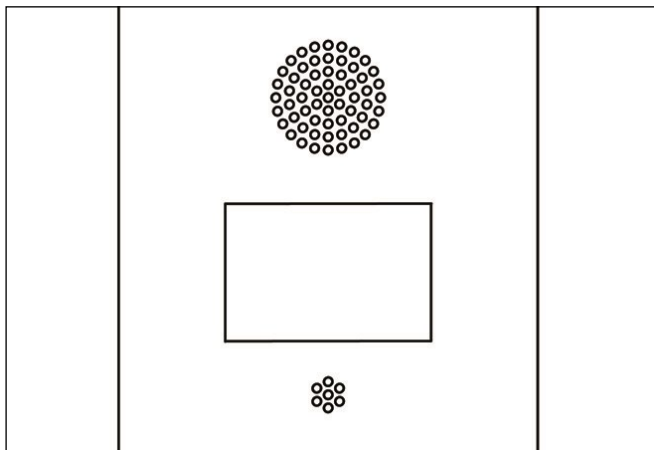

Step 1: Reviewing diagram


NOTICE

All Wur-Com wiring is low voltage and must be isolated from high voltage (120VAC+) circuits and components.

Button wiring can be especially sensitive to high voltage equipment.

Step 1: Reviewing Diagram

- Before beginning, review the diagram for best placement of the Wur-Com components.
- Prepare the panel, where the Wur-Com components will be mounted, by cutting and drilling holes where needed.
- See reference diagram for the placement of weld studs.

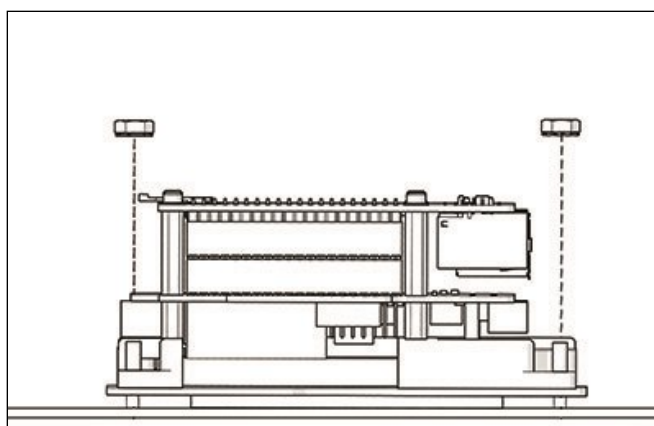


Step 2: Attach the Screen Unit

Step 2: Attach the Wur-Com Unit


- Position the Wur-Com Unit flat against the cutout. Ensure that two weld studs go through four of the holes on the unit.
- Secure with the four Keps Nuts.

INSTALLATION INSTRUCTIONS

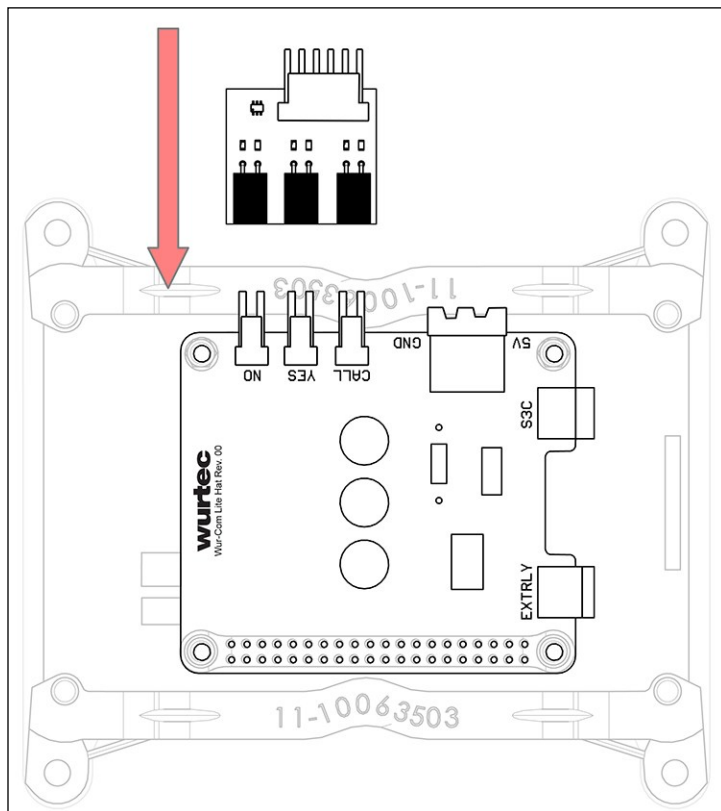

Step 3: Attaching the EMI Filter Board

- On the back of the Wur-com unit, press the EMI Filter board into to the Yes/No/ Call pins.
- Ensure the board is fully seated on the pins.
- *NOTE: The 11-10071543 model does not come with an EMI Filter Board. Connect the buttons directly to the Lite Hat board instead of connecting to the EMI Filter Board.

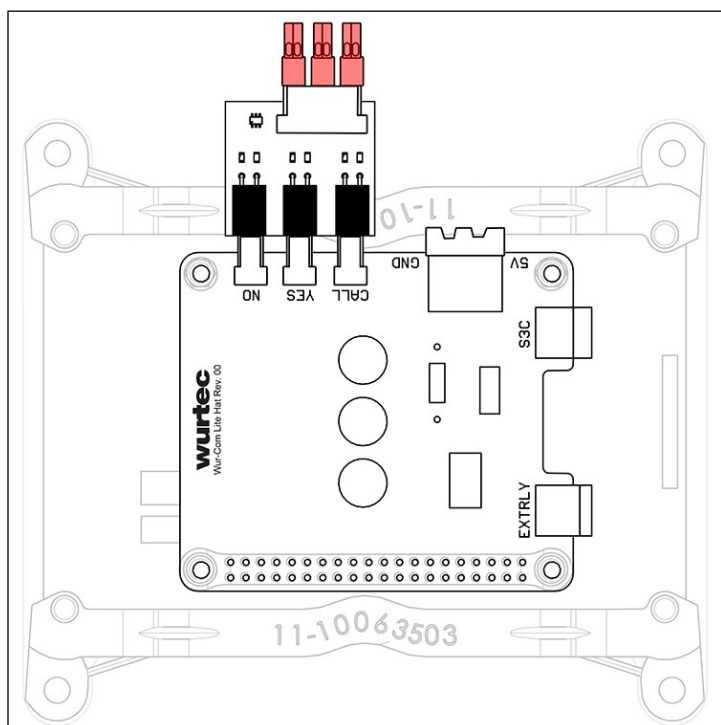


Step 4: Attaching the Button Connectors.

- Press the button connectors onto the pins of the EMI Filter board.
- Ensure all connections are fully seated.

Revision: 05 | 02/2025 | Document No.: Instructions_Wur-Com Car Station

INSTALLATION INSTRUCTIONS

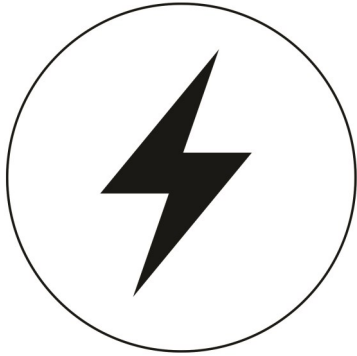

Step 3: Connect Power and Ethernet

Step 5: Connect Power and Ethernet

- Check the diagram and insert the ethernet jack into the Wur-Com unit.
- Plug in any additional ports using the diagram.
- Connect the power cord.
- To finish wiring the Wur-Com unit, check the wiring diagram for complete wiring information.
- *NOTE: Check the voltage with a multimeter BEFORE powering on. (5 Volts only).

NOTES

NOTES